



QTY	ITEM DESCIPTION
1	LEFT END PANEL
1	RIGHT END PANEL
4	CENTRE UPRIGHT
5	SCREEN FRAME
1	SEAT PLANK 5590 MM
1	SEAT BACKREST 5590 MM
QTY	BOLT KIT
20	M10 X 60 S/S BUTTON HEAD BOLT, &2. SPRING WASHER
	M10 X 38MM MUD GUARD WASHER
12	HEX HEAD METAL SEAT SCREWS
12	M10 X 150 MM CONCRETE SCREWS

AURORA 10 PLAYER SHELTER DRAWING NUMBER: ASSEMBLY WEIGHT: 205 KG # OF PACKAGES ORDER PACKED BY: -



Oz Ring Pty Ltd
Trading as:
Play Hard Sports Equipment
ABN 79 066 094 559
13 Alex Fisher Drive
Burleigh Heads Qld 4220
Phone: (07) 5593 4494
Fax: (07) 5593 4338

Website: www.playhardsports.com.au Email: email@playhardsports.com.au

ASSEMBLY INSTRUCTIONS:

THE SHELTER CONSISTS OF UPRIGHT SUPPORTS, SCREEN FRAMES AND BENCH SEATING PLANKS.

- 1. HOLD TWO UPRIGHT SO THE SCREEN WILL FIT BETWEEN THEM
- 2. PLACE THE TWO LUGS ON THE BOTTOM OF THE SCREEN INTO THE LUGS ON EACH UPRIGHT.
- 3. ROTATE THE SCREEN UPWARD TILL IT FITS FLUSH WITH THE UPRIGHT.

ANCHOE HOLE POSITIONS. MOVE THE SHELTER TO DRILL THE HOLES. REPOSITION THE SHELTER AND

- 4. INSERT TWO BOLTS, WASHERS AND SPRING WASHERS THROUGH THE SCREEN FRAME AND INTO THE UPRIGHTS. LOOSELY TIGHTEN TILL ALL SCREENS ARE IN PLACE.
- 5. AFTER THE SHELTER IS ASSEMBLED, ALIGN ALL THE UPRIGHTS USING THE SEAT AND BACKREST PLANKS.
- REMOVE THE TAPE COVER FILM AND REINSTALL THE SEAT AND BACKREST.
- 7. THERE SHOULD BE NO GAPS BETWEEN THE FRAME PANELS. ONCE ALL FRAMES AND SCREEN ARE PROPERLY ALIGNED TOGETHER, TIGHTEN ALL THE BOLTS.
- 8. ADJUST THE POSITION OF THE SHELTER ON THE SLAB AND MARK THE HOLE POSITIONS ON THE SLAB.
- DRILL 10MM X 100MM ANCHOR HOLES AND BOLT THE SHELTER IN PLACE USING 10MM X 150MM CONCRETE SCREWS.

