


**ASSEMBLY AND INSTALLATION OF THE POLES**

1. INSERT THE UPPER POLE FITTED WITH AN INTERNAL SLEEVE INTO THE BASE POLE AND JOIN THEM TOGETHER WITH 14g X 35 MM PAN HEAD TEK SCREWS.
2. THEN SLIDE THE JOINED POLES INTO THE SPIGOT AND JOIN THEM TOGETHER USING THE SCREWS.
3. FEED THE ROPE THROUGH THE PULLEY LOCATED AT THE UPPER POLE. PULL THE ROPE TO ENSURE THAT ROPE IS EQUALLY DISTRIBUTED.  
**THIS HELPS TO ENSURE THAT THE ROPES DO NOT FALL DOWN WHILE LIFTING THE POLES.**
4. THEN INSERT THE ANGLE MOUNTING PLATES ONTO THE THREADED ROD IN THE FOOTINGS. USE THE BOLTS TO ENSURE THAT THE TWO PLATES ARE AT LEVEL POSITION.
5. POSITION THE ASSEMBLED POST SUCH THAT THE ROUND BAR AT THE BOTTOM OF THE POLE IS PLACED ON THE GROOVE OF THE MOUNTING PLATES. THEN RAISE THE POST UPRIGHT AND BOLT THE POSTS PROPERLY.

**INSTALLATION OF THE NETTING SYSTEM**

6. LAY THE NET ACROSS THE POST POSITION AND IDENTIFY THE TWO TOP CORNERS OF NET.
7. INSERT A M8 'D' SHACKLE AT THOSE TWO CORNERS AND ATTACH THE EYE IN THE ROPE TO THE D SHACKLE.
8. EQUALLY SPACE THE NET ALONG THE MIDDLE POSTS AND REPEAT THE PROCESS.
9. ONCE ALL THE ROPES HAVE BEEN ATTACHED TO THE NET, START RAISING THE NET BY PULLING THOSE ROPES.
10. AFTER THE NET HAVE BEEN RAISED TO THE DESIRED HEIGHT, TIE OFF THE ROPES AT THE ROPE CLEATS LOCATED AT THE BOTTOM OF THE POSTS.

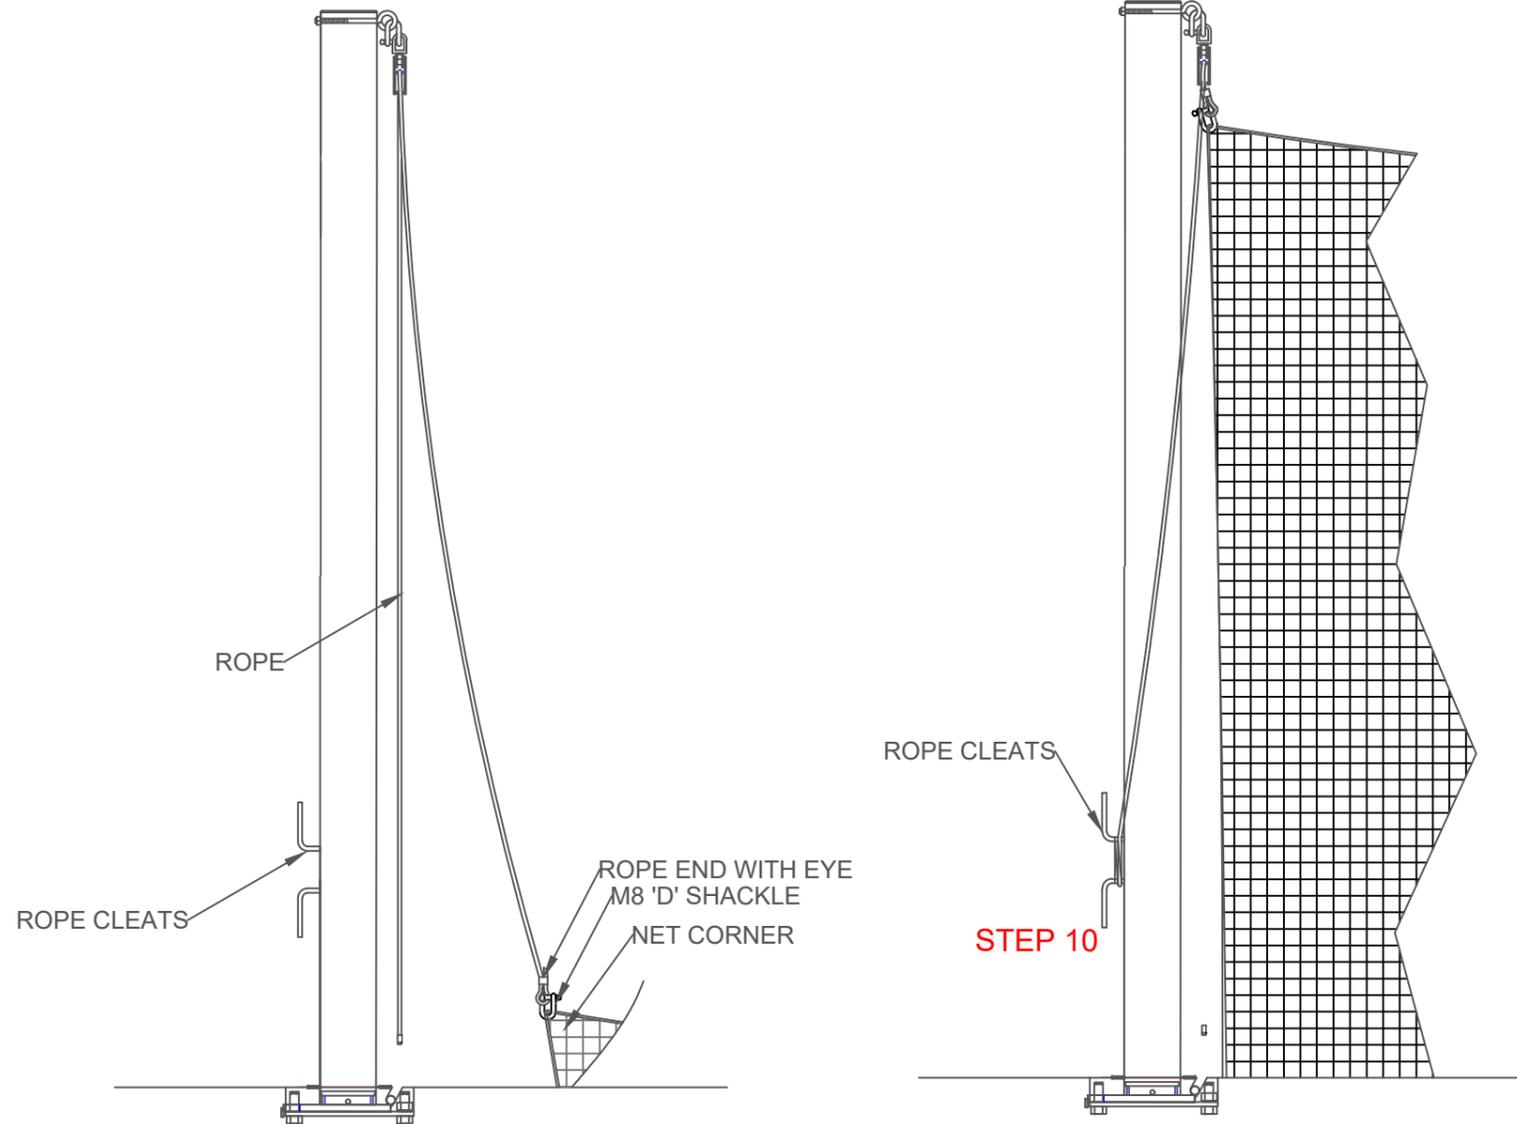

COMPONENTS		TITLE: ARN10 AFL NET POSTS	
QTY	ITEM	DRAWING NUMBER: NET IN STALLATION INSTRUCTIONS	
8	NET POLE FOOTINGS	WEIGHT: -	CUBIC MEASURE
48	14g X 35 GAL PAN HEAD SCREWS	 <p><b>Oz Ring Pty Ltd</b> Trading as: <b>Play Hard Sports Equipment</b> ABN 79 066 094 559 24 Ern Harley Drive Burleigh Heads Qld 4220 Phone: (07) 5593 4494 Fax: (07) 5593 4338 Website: www.playhardsports.com.au Email: email@playhardsports.com.au</p>	
8	BASE POLE (7.5M)		
8	UPPER POLE (2.5M)		
8	INTERNAL SLEEVE (1.2M)		
8	POST SPIGOT		
8	ROPE (20M LONG)		
16	ANGLE MOUNTING PLATE		
8	ROPE - 20M LONG (EYE ONE END)		
8	M8 D SHACKLE		
-	-		
-	-		
-	-		
-	-		
-	-		