


ASSEMBLY INSTRUCTIONS:

THE SHELTER CONSISTS OF UPRIGHT SUPPORTS, SCREEN FRAMES AND BENCH SEATING PLANKS.

- 1. HOLD TWO UPRIGHT SO THE SCREEN WILL FIT BETWEEN THEM.
- 2. PLACE THE TWO LUGS ON THE BOTTOM OF THE SCREEN INTO THE LUGS ON EACH UPRIGHT.
- 3. ROTATE THE SCREEN UPWARD TILL IT FITS FLUSH WITH THE UPRIGHT.
- 4. INSERT TWO BOLTS, WASHERS AND SPRING WASHERS THROUGH THE SCREEN FRAME AND INTO THE UPRIGHTS. LOOSELY TIGHTEN TILL ALL SCREENS ARE IN PLACE.
- 5. AFTER THE SHELTER IS ASSEMBLED, ALIGN ALL THE UPRIGHTS USING THE SEAT AND BACKREST PLANKS.
- 6. REMOVE THE TAPE COVER FILM AND REINSTALL THE SEAT AND BACKREST
- WHILE REINSTALLING SEAT AND THE BACK REST TO THE SHELTER FRAME, ENSURE THAT JOIN OF THE SEAT AND BACK REST IS IN CENTRAL UPRIGHT FRAME
- THERE SHOULD BE NO GAPS BETWEEN THE FRAME PANELS. ONCE ALL FRAMES AND SCREEN ARE PROPERLY ALIGNED TOGETHER, TIGHTEN ALL THE BOLTS.
- 9. ADJUST THE POSITION OF THE SHELTER ON THE SLAB AND MARK THE HOLE POSITIONS ON THE SLAB.
- DRILL 12MM X 100MM ANCHOR HOLES AND BOLT THE SHELTER IN PLACE USING 12MM X 150MM CONCRETE SCREWS.

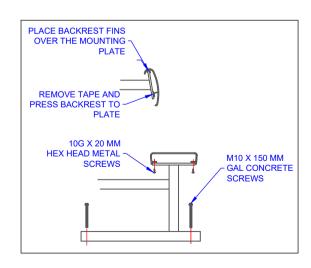

QTY	ITEM DESCIPTION
1	LEFT END PANEL
1	RIGHT END PANEL
5	CENTRE UPRIGHT
6	SCREEN FRAME
2	SEAT PLANK 3349 MM
2	SEAT BACKREST 3349 MM
	BOLT KIT
24	M10 X 60 S/S BUTTON HEAD BOLT, & SPRING WASHER
	M10 X 38MM MUD GUARD WASHER
14	HEX HEAD METAL SEAT SCREWS
14	M10 X 150 MM CONCRETE SCREWS





Oz Ring Pty Ltd
Trading as:
Play Hard Sports Equipment
ABN 79 066 094 559
24 Ern Harley Drive
Burleigh Heads Qld 4220
Phone: (07) 5593 4494
Fax: (07) 5593 4338

Website: www.playhardsports.com.au Email: email@playhardsports.com.au