


WORKSHOP DRAWING

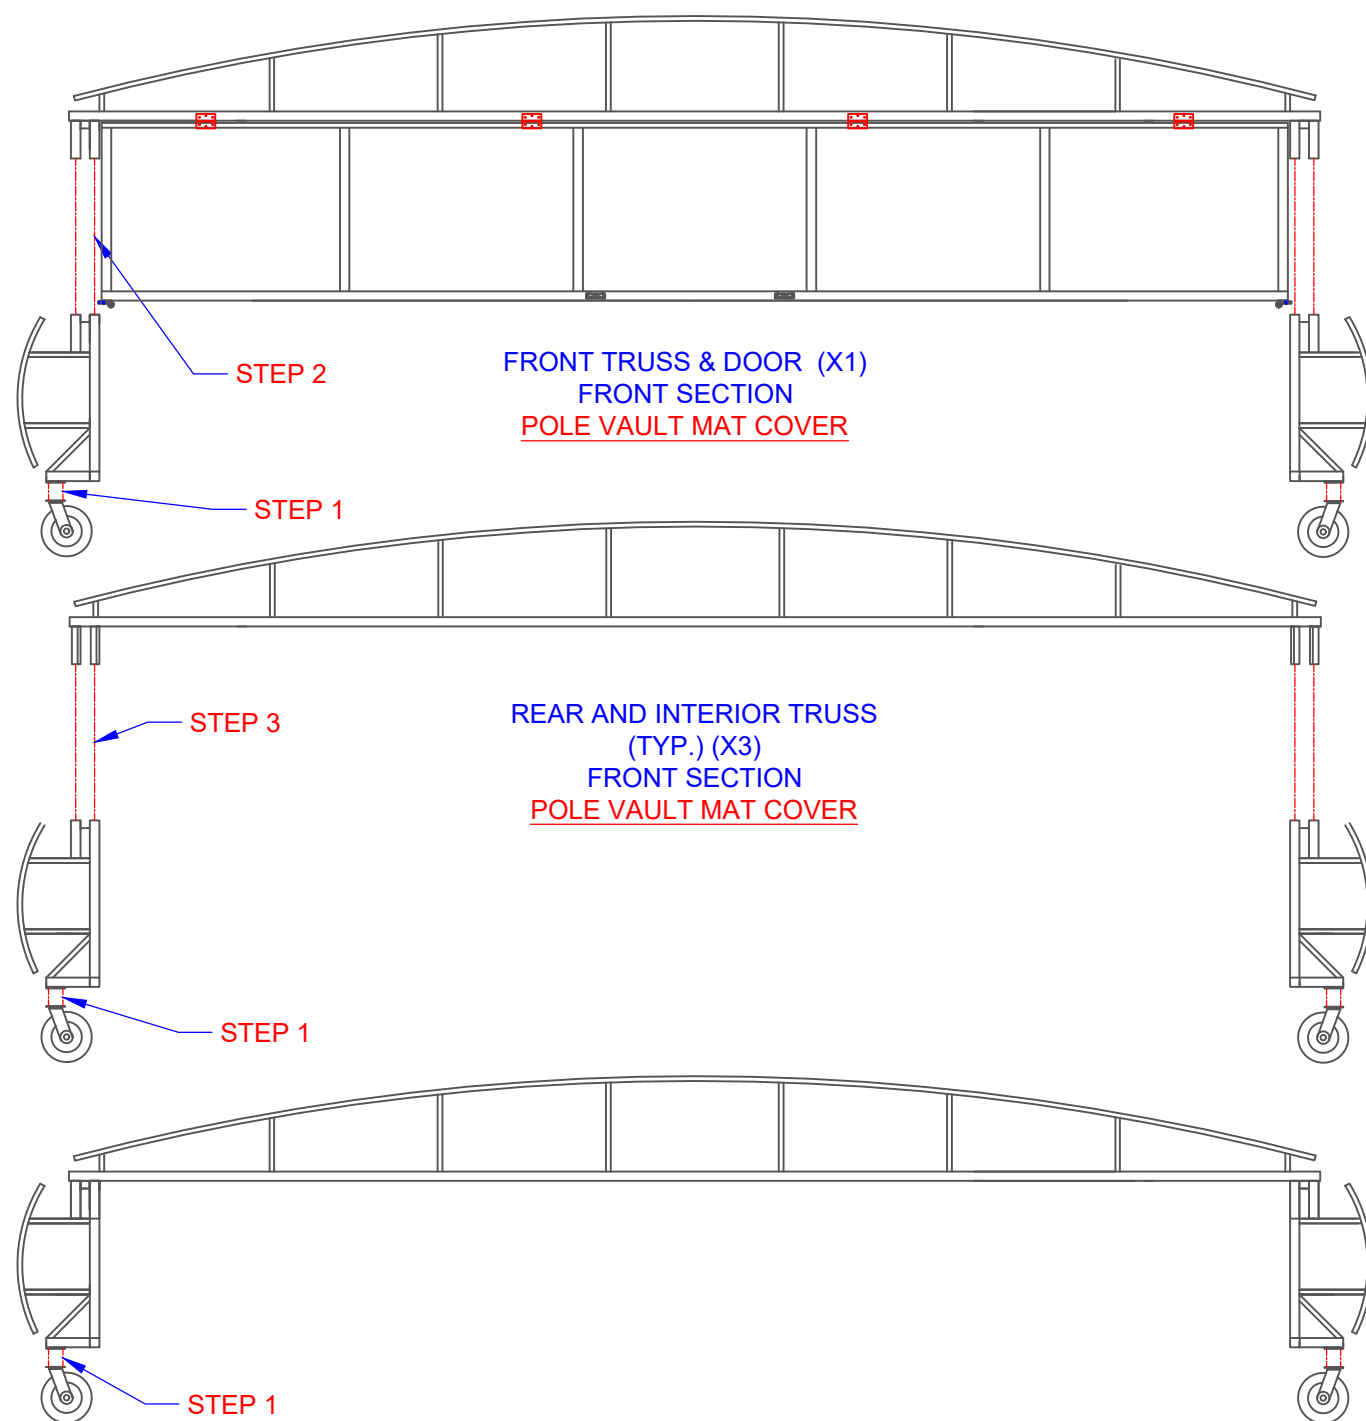

NOTE FOR THE INSTALLER:
TPV30 HAS TWO SEPARATE FRAMES.
IDENTIFY ALL THE PARTS AS LISTED IN THE
PACKING LIST BEFORE ASSEMBLING THEM
TOGETHER.

ASSEMBLY INSTRUCTIONS

STEP 1: Install castors (two fixed at rear and 2 swivel at front section) using 4 x M10 x 30 mm gal hex bolt and nyloc nut (each).

STEP 2: Insert the front arch trusses with the door frame attached into Left & Right side rails. Ensure the door opens outward.

STEP 3: Insert rest of the arch trusses into side rails.


STEP 4: Then, attach the gas strut to the pins at the door and the side frame.

STEP 5: Attach sheeting to the frames.

Refer sheeting info sheet for detailed information.

Please note that front, rear and door sheets are already attached to the frame. You are required to install roofing sheets only.

NOTE: All hardware supplied

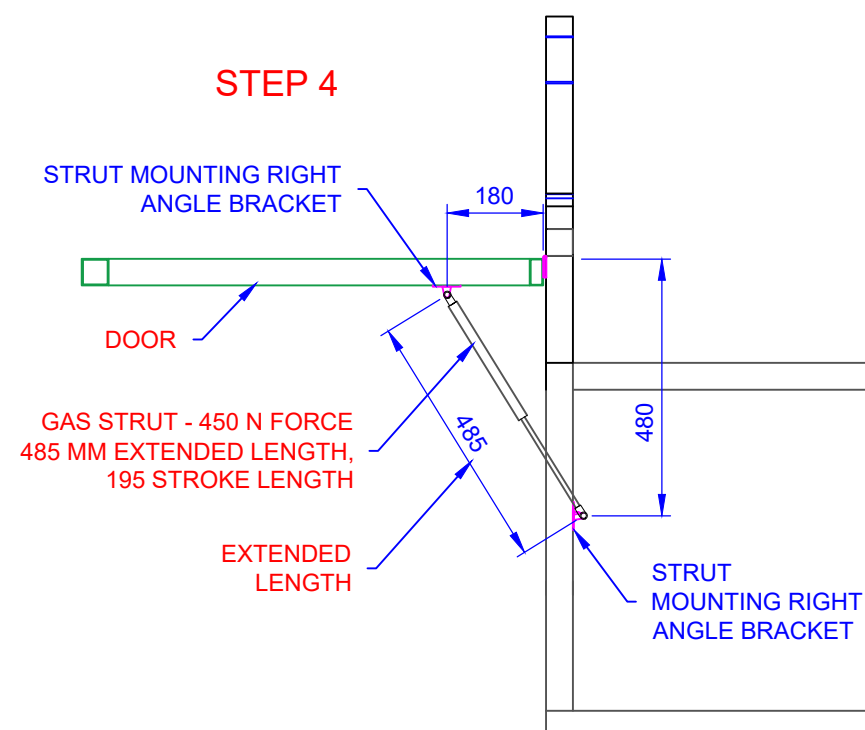

TITLE: TPV30 - POLE VAULT MAT COVER ASSEMBLY INSTRUCTIONS 01	
DATE: 13/03/2023	A3
	
<p>Oz Ring Pty Ltd Trading as: Play Hard Sports Equipment ABN 79 066 094 559 24 Ern Harley Drive Burleigh Heads Qld 4220 Phone: (07) 5593 4494 Fax: (07) 5593 4338 Website: www.playhardsports.com.au Email: email@playhardsports.com.au</p>	