

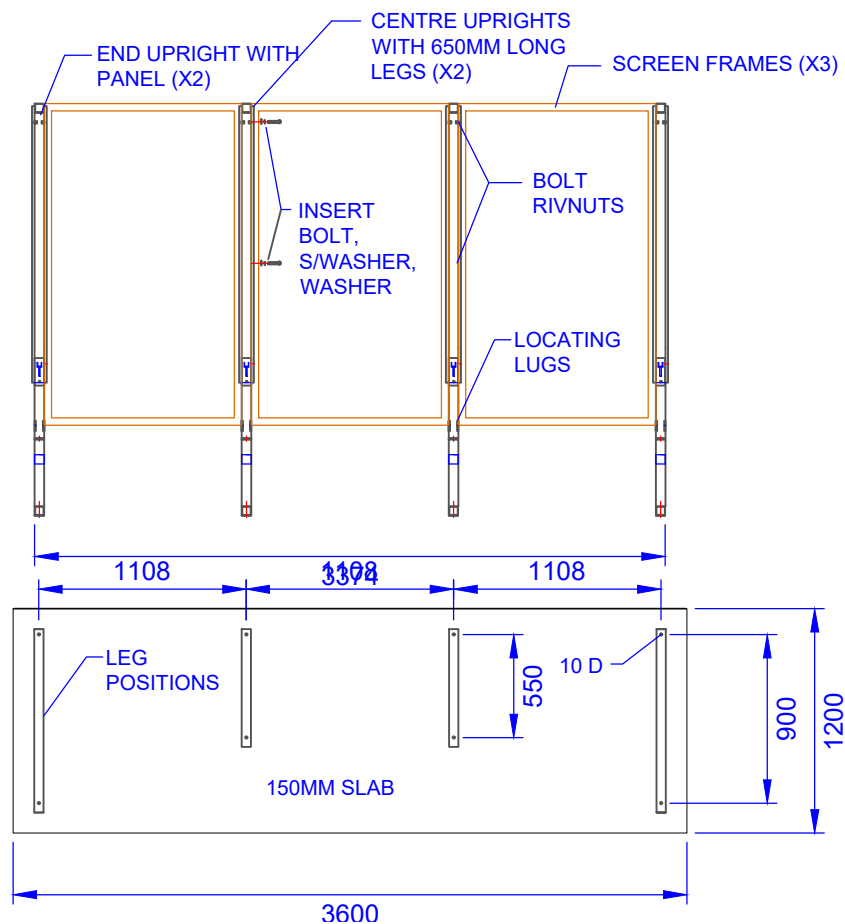
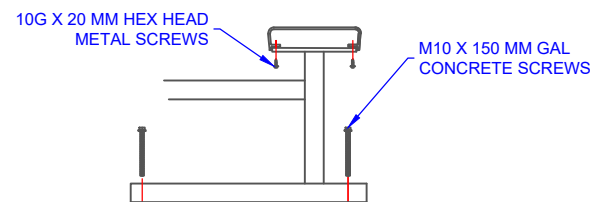


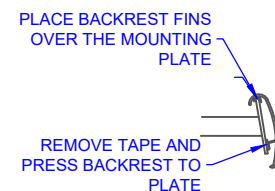

ASSEMBLY INSTRUCTIONS:

THE SHELTER CONSISTS OF UPRIGHT SUPPORTS, SCREEN FRAMES AND BENCH SEATING PLANKS.

- HOLD TWO UPRIGHT SO THE SCREEN WILL FIT BETWEEN THEM.
- PLACE THE TWO LUGS ON THE BOTTOM OF THE SCREEN INTO THE LUGS ON EACH UPRIGHT.
- ROTATE THE SCREEN UPWARD TILL IT FITS FLUSH WITH THE UPRIGHT.
- INSERT TWO BOLTS, WASHERS AND SPRING WASHERS THROUGH THE SCREEN FRAME AND INTO THE UPRIGHTS. LOOSELY TIGHTEN TILL ALL SCREENS ARE IN PLACE.
- AFTER THE SHELTER IS ASSEMBLED, ALIGN ALL THE UPRIGHTS USING THE SEAT AND BACKREST PLANKS.
- REMOVE THE TAPE COVER FILM AND REINSTALL THE SEAT AND BACKREST.
- THERE SHOULD BE NO GAPS BETWEEN THE FRAME PANELS. ONCE ALL FRAMES AND SCREEN ARE PROPERLY ALIGNED TOGETHER, TIGHTEN ALL THE BOLTS.
- ADJUST THE POSITION OF THE SHELTER ON THE SLAB AND MARK THE HOLE POSITIONS ON THE SLAB.
- DRILL 10MM X 100MM ANCHOR HOLES AND BOLT THE SHELTER IN PLACE USING 10MM X 150MM CONCRETE SCREWS.

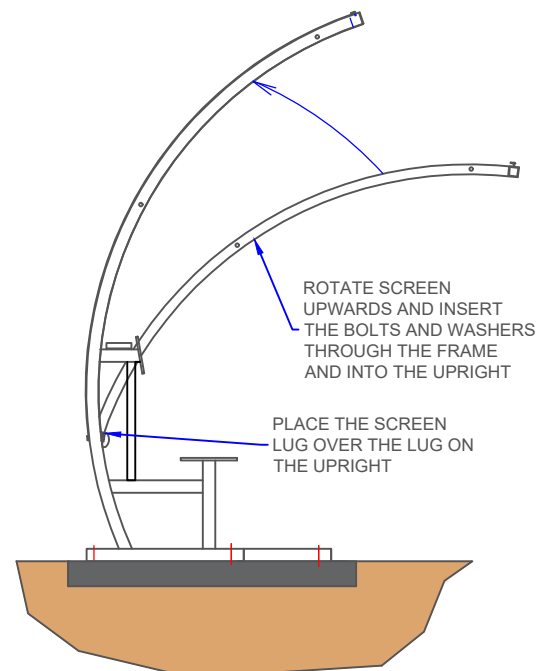

QTY	ITEM DESCRIPTION
1	LEFT END PANEL
1	RIGHT END PANEL
2	CENTRE UPRIGHT
3	SCREEN FRAME
1	SEAT PLANK 3375 MM
1	SEAT BACKREST 3375 MM
QTY	BOLT KIT
12	M10 X 60 S/S BUTTON HEAD BOLT, & SPRING WASHER M10 X 38MM MUD GUARD WASHER
8	HEX HEAD METAL SEAT SCREWS
8	M10 X 150 MM CONCRETE SCREWS

TITLE: AURORA 6 PLAYER SHELTER	
DRAWING NUMBER: ASSEMBLY	
WEIGHT: 160 KG	# OF PACKAGES -
ORDER PACKED BY:	-



Oz Ring Pty Ltd

Trading as:

Play Hard Sports Equipment

ABN 79 066 094 559

13 Alex Fisher Drive

Burleigh Heads Qld 4220

Phone: (07) 5593 4494

Fax: (07) 5593 4338

Website: www.playhardsports.com.au

Email: email@playhardsports.com.au