


INSTRUCTION TO ATTACH NET

. SET THE PICKLEBALL POSTS AT CORRECT POSITION, MARK THE HOLES AND DRILL THROUGH. THEN BOLT THEM DOWN USING CONCRETE SCREWS.


THE NET ROPE HAS EYE AT BOTH ENDS.

- HOOK ONE END OF THE NET ROPE WITH EYE TO THE HOOK IN THE INACTIVE POST.
- 3. PASS THE ROPE OVER THE GROOVE IN THE INACTIVE POST CAP AND FEED THE OTHER END OF THE ROPE THROUGH THE GROOVE IN THE ACTIVE POST AS SHOWN.
- 4. THEN, HOOK THE OTHER END OF THE ROPE WITH EYE TO THE STRAP OF THE RATCHET WINDER.
- USE THE RATCHET WINDER'S HANDLE TO TIGHTEN THE NET.

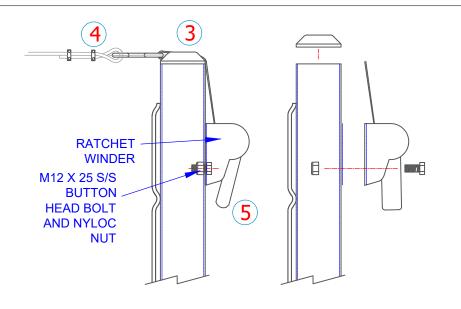

ACTIVE POST

	QTY	ITEM DESCIPTION
	1	NON WINDER POST ON BASE PLATE WITH INTERNAL BOLT SHAFT
	1	WINDER POST ON BASE PLATE WITH RATCHET WINDER MECHANISM
	2	STAINLESS STEEL POST CAPS
	1	FULTON RETRACTABLE RATCHET (TRANSOM TIE DOWN - 2" STRAP W/ S-HOOK) BOLT-ON FUNCTION
	1	M12 X 25 MM S/S BUTTON HEAD BOLT AND NYLOC NUT

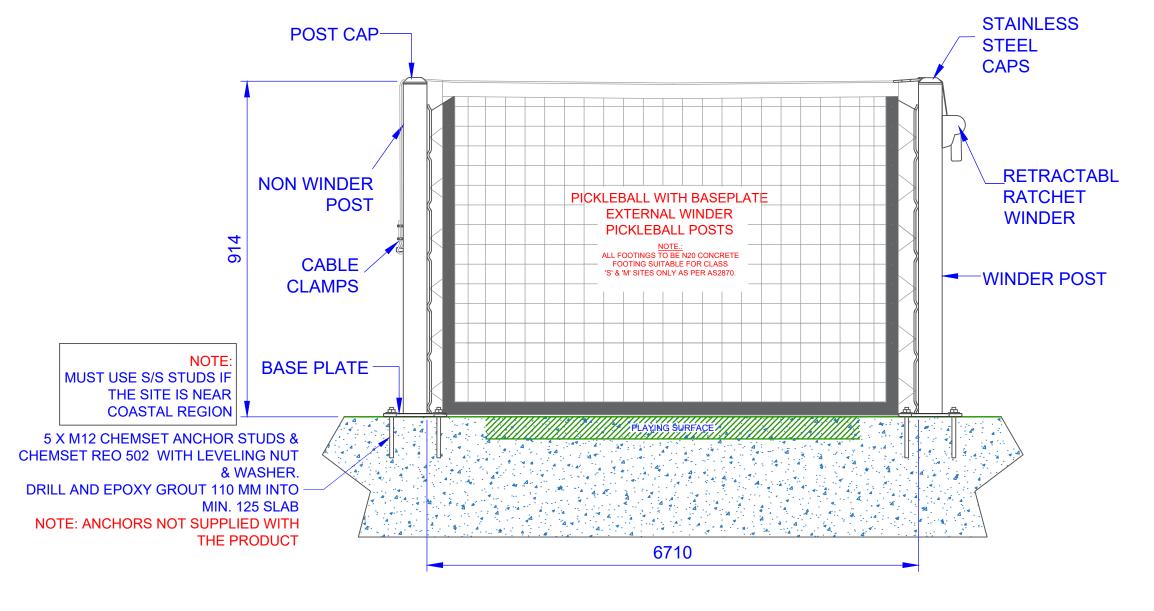



Oz Ring Pty Ltd
Trading as:
Play Hard Sports Equipment
ABN 79 066 094 559

13 Alex Fisher Dr. Burleigh Heads Qld 4220
Phone: (07) 5593 4494 Fax: (07) 5593 4338
Website: www.playhardsports.com.au
Email: email@playhardsports.com.au