
ASSEMBLY INSTRUCTIONS

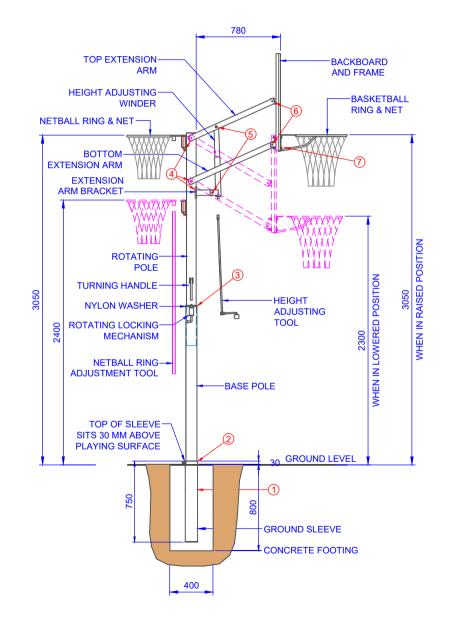

REFER TO THE PACKING LIST FOR A COMPLETE LIST OF COMPONENTS AND PART NUMBERS

FOR PART	QTY	FASTENERS / BOLT LIST
	1	M10 X 170 MM GAL HEX BOLT AND NYLOC NUT
B-E	2	M10 NYLON WASHERS
	2	M10 GAL WASHERS
	1	M10 X 170 MM GAL HEX BOLT AND NYLOC NUT
B-D	2	M10 NYLON WASHERS
	2	M10 GAL WASHERS
	2	M10 X 50 MM GAL HEX BOLT AND NYLOC NUT
J-D	2	M10 NYLON WASHERS
	4	M10 WASHERS
	2	M10 X 50 MM GAL HEX BOLT AND NYLOC NUT
J-E	2	M10 NYLON WASHERS
	4	M10 WASHERS
5	1	M12 X 170 MM GAL HEX BOLT AND NYLOC NUT
D-H	2	M12 WASHERS
	1	M10 X 83 MM GAL HEX BOLT AND NYLOC NUT
B-H	2	M10 WASHERS
105	4	M10 X 75 MM GAL HEX BOLT AND NYLOC NUT
J-G-F	8	M10 WASHERS
С	1	M12 X 25 MM GAL HEX BOLT
В	1	M5 X 40 MM GAL HEX BOLT & NYLOC
R	2	M6 X 50 MM GAL HEX BOLT AND NYLOC NUT

FOLLOW THE STEPS TO ASSEMBLE AND ERECT YOUR GAME CHANGER BASKETBALL TOWER.

- 1) CONCRETE THE GROUND SLEEVE IN POSITION, USE A SPIRIT LEVEL AND LEAVE TO CURE FOR 4 DAYS. (NOTE: TOP OF GROUND SLEEVE SHOULD SIT 30 MM ABOVE PLAYING SURFACE).
- 2) PLACE THE BASE POLE IN THE SLEEVE, ALIGN THE POLE AND TIGHTEN THE SLEEVE BOLT.
- 3) SLIDE THE NYLON WASHER OVER THE BOTTOM OF THE ROTATING POLE AND INSERT INTO THE BASE POLE.
- 4) BOLT THE TWO EXTENSION ARMS TO THE ROTATING POLE (NOTE THE WINDER HOLE IN THE TOP EXTENSION ARM).
- 5) BOLT THE ADJUSTABLE WINDER TO THE EXTENSION ARM BRACKET AND TOP EXTENSION ARM.
- 6) BOLT THE 4 BRACKETS TO THE BACKBOARD FRAME. THEN BOLT THE BACKBOARD FRAME AND BRACKETS TO THE EXTENSION ARMS.
- 7) BOLT THE BASKETBALL RING TO THE BACKBOARD FRAME.
- 8) USING THE NETBALL HAND TOOL INSERT THE NETBALL INTO THE BRACKET ON THE TOTATING POLE.
- 9) USE WINDER HAND TOOL TO ADJUST THE POSITION AND HEIGHT OF THE BASKETBALL RING.

NOTE:

DO NOT OVER TIGHTEN NYLOC NUTS. THEY SHOULD BE TIGHTENED TO REDUCE PLAY BUT STILL ALLOW THE PIVOTING PARTS TO MOVE WITHOUT TENSION.

GAME CHANGER BASKETBALL TOWER
DRAWING NUMBER:
GAME CHANGER ASSEMBLY 1 OF 3
-
FLAY HARD sports equipment

Oz Ring Pty Ltd Trading as:

Play Hard Sports Equipment ABN 79 066 094 559 13 Alex Fisher Drive

> Burleigh Heads Qld 4220 Phone: (07) 5593 4494

Fax: (07) 5593 4338

Website: www.playhardsports.com.au Email: email@playhardsports.com.au